



<http://www.hp.com>

HEWLETT-PACKARD COMPANY

OPERATING AND SERVICE MANUAL

**2001**

**AUDIO OSCILLATOR**

**OPERATING AND SERVICING MANUAL**

**MODEL 2001**

**AUDIO OSCILLATOR**

**All Serial and Type Numbers**

<http://www.ebaman.com>

**HEWLETT-PACKARD COMPANY  
1501 PAGE MILL ROAD, PALO ALTO, CALIFORNIA, U. S. A.**

**1258-1**

## General Description

The Model 200I Oscillator is designed for applications where a very accurate variable frequency oscillator is required. The instrument has an effective frequency scale length of 90 inches to cover its range of 6 to 6,000 cycles per second. The frequency dial of each instrument is accurately hand calibrated for maximum accuracy at any dial setting. This instrument may be used to determine the frequency of an unknown voltage by comparison of the unknown voltage with the output voltage of the Model 200I on an oscilloscope.

The resistance-capacity oscillator used in this instrument has a high degree of stability and in addition, individual calibration controls have been provided for each of the 6 ranges of the instrument. The output amplifier used in the Model 200I contains a large amount of negative feedback for stability and minimum distortion. The output voltage available is 10 volts (100 milliwatts) across 1000 $\Omega$  resistive load.

# INSTRUCTIONS

## MODEL 200I

### AUDIO OSCILLATOR

#### Specifications

##### Frequency Rating --

Frequency Range - 6 to 6,000 cycles/second.

Frequency Dial Calibration - two scales, A (top) scale 6 to 20, B (bottom) 20 to 60

Range	Frequency
Ax1	6 to 20 cycles/second
Bx1	20 to 60 cycles/second
Ax10	60 to 200 cycles/second
Bx10	200 to 600 cycles/second
Ax100	600 to 2,000 cycles/second
Bx100	2,000 to 6,000 cycles/second

Calibration Accuracy -  $\pm 2\%$  ( $\pm 1\%$  with standardization)

Frequency Response -  $\pm 1$  db from 6 to 6,000 cycles/second (reference: 400 cycles/second).

Frequency Stability -  $\pm 2\%$  or .2 cycles/second (whichever is greater) under normal temperature conditions, including initial warm-up. An accuracy of  $\pm 1\%$  can be maintained by frequent standardization of the Model 200I against a suitable frequency standard. Line voltage variations up to 10% of rated voltage will have a negligible effect on the frequency stability of the instrument.

##### Power Output Rating --

Power Output - 100 milliwatts (10 volts) into 1000 ohms resistive load.

Distortion - Less than 1% at rated output from 10 to 6,000 cycles/second.

Hum and Noise - Less than .1% of rated output (at least 60 db below rated output).

Load Impedance - 1,000 ohms resistive.

Approximate Internal Impedance - 25 ohms, 50 to 6,000 cycles/second.

##### Power Supply Rating --

Voltage - 115/230 volts  $\pm 10\%$

Frequency - 50 to 60 cycles

Wattage - 60 watts

## Overall Dimensions --

Cabinet Model - 8-3/4" high x 18-3/4" wide x 11-5/8" deep.

Rack Model - 8-3/4" high x 19" wide x 12" deep.

Panel: 8-3/4" high x 19" wide.

Depth behind panel: 10-3/4".

## Weight --

Cabinet Model - 26 pounds.

Rack Model - 26 pounds.

## Operating Instructions

### Inspection --

This instrument has been thoroughly tested and inspected before being shipped and is ready for use when received.

After the instrument is unpacked, it should be carefully inspected for damage received in transit. If any shipping damage is found, follow the procedure outlined in the "Claim for Damage in Shipment" section on the last page of this instruction book.

### Controls and Terminals --

OFF-ON - This rotary switch controls all the power supplied to the instrument from the power line. When this switch is turned on the frequency dial window will be illuminated.

FREQ. RANGE - This rotary switch inserts various values of resistance in the frequency determining circuit of the oscillator. The position of this switch indicates the frequency dial scale in use and the multiplying factor to be used with this scale.

Frequency Dial - This dial, located in the middle of the control panel, has two scales both calibrated in cycles per second. This dial is controlled by two knobs, one above and one below the name plate on the control panel. The top knob is a direct drive for the frequency dial and the bottom knob is a vernier drive knob.

AMPLITUDE - This variable resistor controls the amount of oscillator signal applied to the output amplifier and thus the voltage appearing at the OUTPUT terminals. This control is calibrated from "0" to "100" in arbitrary units.

**FUSE** - The fuseholder, located on the back of the instrument, contains a 1 ampere cartridge fuse. To replace the fuse, unscrew the fuseholder cap and remove the blown fuse, insert a new fuse of the same type and replace the fuseholder cap. For 230 volt operation this fuse should have a 1/2 ampere rating. Replacement fuses must be of the "Slo-Blo" type as specified in the Table of Replaceable Parts in this instruction manual.

**Power Cable** - This instrument is equipped with a special three conductor power cable with a standard two prong male plug moulded on one end. The third conductor (green) protrudes from the cable near the plug and may be used to connect the instrument chassis to an external ground.

**OUTPUT** - These two binding posts are the output terminals of the instrument. These binding posts will accept bare wire, phone tips, banana plugs, or the standard dual banana plugs with 3/4" spacing. The bottom binding post is connected directly to the instrument chassis.

### Operation of the Instrument --


The procedure for correct operation of the Model 200I is as follows:

1. Connect the power cable to a suitable power source.
2. Turn the power switch to ON and allow about five minutes for the instrument to reach its normal operating temperature. This warm-up period should be thirty minutes when maximum accuracy is desired.
3. Set the Frequency Dial and the **FREQ. RANGE** switch for the desired output frequency. For example: If the desired output frequency is 1,000 cycles/second, set the frequency dial to 10 (A scale) and the **FREQ. RANGE** switch to **Ax100** ( $10 \times 100 = 1,000$ ). If the desired output frequency is 440 cycles/second, set the frequency dial to 44 (B scale) and the **FREQ. RANGE** switch to **Bx10** ( $44 \times 10 = 440$ ).
4. Connect the Model 200I output terminals to the proper points in the test set-up. The instrument has an unbalanced output and for best operation should be connected to a load of not less than 1,000 ohms.

### CAUTION

The output of the Model 200I should not be connected to a high quality audio transformer. Because of the type of output circuit used in this instrument, there is a small amount of direct current present at the output terminals. This direct current might damage a high quality audio transformer.

5. Set the AMPLITUDE control for the desired output voltage from the Model 200I. If a small output voltage with minimum noise is desired, best results will be obtained by externally attenuating the instrument output rather than by decreasing the AMPLITUDE control. A simple voltage divider will be a satisfactory attenuator in many cases, the total resistance of this voltage divider should not be less than 1,000 ohms.

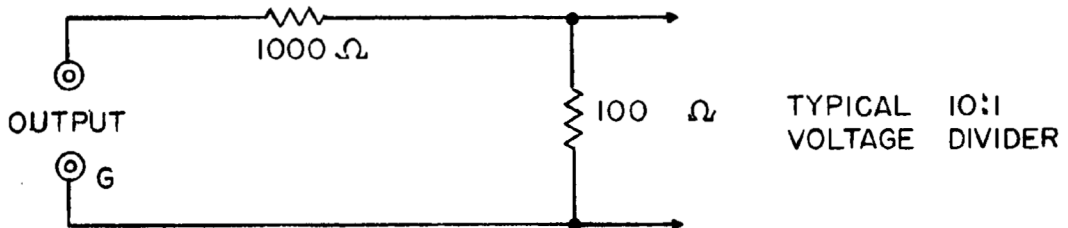

### Circuit Description

The circuit of the Model 200I consists of an oscillator section, an output amplifier section, and a power supply section that includes a voltage regulator to stabilize the oscillator portion of the instrument.

The oscillator section consists of a 6SJ7 (V1) and a 6V6 or 6F6 (V2) and is basically a two stage resistance coupled amplifier. Two feedback loops are used around this amplifier, positive feedback to set up oscillations and negative feedback to reduce distortion and keep the amplitude of oscillation constant. The positive feedback loop contains fixed resistance values and a variable capacitor (See Fig. 1) is proportioned such that  $R_1 C_1 = R_2 C_2$ . With this circuit arrangement the ratio between the voltage appearing at the grid of the first stage and the voltage applied to the network will vary with frequency as shown by Fig. 2. This curve also illustrates the phase relationship that exists between the voltage applied to the frequency determining network ( $E_{in}$ ) and the portion applied to the grid ( $E_{out}$ ) of the first stage. Oscillations will take place at the point on the curves where the phase shift through the network is  $0^\circ$  and the amplitude of the grid signal is maximum. The frequency of oscillation will be equal to  $1/2 \sqrt{R_1 C_1 R_2 C_2}$  or  $1/2 RC$  since  $R_1 = R_2$  and  $C_1 = C_2$ . The cathode by-pass capacitor (C8) in the second oscillator stage (V2) is to correct phase shift at the higher operating frequencies of the instrument.

The negative feedback network in the oscillator section minimizes changes in oscillator amplitude with changes in frequency. The incandescent lamp used as a cathode bias resistor, and also part of the negative feedback voltage divider, in the first stage of the oscillator (V1) has a temperature-resistance characteristic

such that its resistance will increase in direct proportion to the voltage applied to it. Changes in the resistance of this lamp will change the percentage of negative feedback in the oscillator circuit. When the oscillator voltage rises more voltage is applied to the lamp (R19), the increased voltage will raise the temperature and resistance of the lamp which in turn increases the percentage of negative feedback in the oscillator circuit. Increasing the percentage of negative feedback will tend to decrease the oscillator output voltage to its normal operating point. The action will be reversed if the oscillator output voltage decreases, the negative feedback voltage will decrease lowering the voltage across the lamp (R19) which will lower its resistance thus lowering the percentage of negative feedback and tending to raise the oscillator output to its normal operating point. The thermal inertia of the lamp is great enough so that its resistance will not vary in accordance with the sine wave voltage at the lowest frequencies involved.

The amplifier section of the instrument consists of two stages (V3 and V4) with a large amount (35 db) of negative feedback for stability and low distortion. The negative feedback may be divided into three sections,

1. Overall (from the plate of V4 to the cathode of V3), 16 db.
2. Un-bypassed cathode resistor in input stage (V3), 11 db.
3. Un-bypassed cathode in the output amplifier (V4), 8 db.

The plate of the output amplifier is coupled through C12 to the OUTPUT terminals of the instrument. The 10,000 ohms resistor across the OUTPUT terminals serves to keep C12 charged and thus preventing surges of direct current through the external load when the load is first connected.

The power supply section of the instrument consists of a conventional full wave rectifier (V8) followed by a pi-section filter. Following the filter there is an electronic regulator to supply the direct current to the oscillator section of the instrument. The voltage regulator circuit consists of V5, V6 and V7. The 6L6 (V5) acts as a variable resistance unit with a 6SQ7 (V6) controlling its resistance. The voltage regulating tube (V7) keeps the cathode potential of the 6SQ7 (V6) constant. When the regulator output voltage rises, the grid of the 6SQ7 (V6) will become more positive, this will allow it to conduct more current through its plate load (R39). Increased current through R39 will increase the bias on the 6L6 (V5) which will raise its resistance and decrease the output voltage of the regulator. If the output voltage of the regulator drops below its normal operating point, this action will be reversed with a resulting decrease in resistance of V5 and an increase in regulator output voltage. A hum balancing potentiometer (R44) is included to minimize the effects of heater to cathode leakage.

## Maintenance

### Cover and Bottom Plate Removal --

The bottom plate is removed by unscrewing the four screws, one in each corner of the bottom plate, which fasten the plate to the chassis.

The cover is removed by unscrewing the eight screws which fasten the cover to the back and top of the instrument.

#### Tube Replacement --

After replacing any of the oscillator or amplifier (V1 - V4) tubes in the instrument, distortion measurements should be made to determine whether or not the instrument still meets the specifications set forth in the front of this instruction manual. Selected tubes are not required for proper operation of this instrument, but defective tubes may cause excessive noise in the output waveform. When replacing tubes, it may be necessary to readjust the hum balancing control (R44) on the back of the instrument. (See HUM BAL. Adjustment, R44) After replacing any of the tubes in the power supply section of this instrument (V5 - V8), refer to the "Voltage Regulator Adjustment" section.

#### Replacement of Lamp R19 --

This lamp operates well below its rating and should have an infinite life. The lamp may be damaged by severe mechanical vibration. If the lamp is damaged it may result in excessive oscillator voltage or no oscillations if the lamp opens. If the lamp is replaced, the oscillator voltage should be checked to make certain it falls within the range specified on the schematic diagram (26 - 28 volts RMS at 1000 ). This voltage may be measured between the case of C9 and ground with a 1000 $\Omega$ /volt or better AC meter (See Fig. 5 for the location of C9). If the oscillator voltage is not correct, adjust R25 (Above C9 and RB2) until the correct voltage is obtained. If the correct oscillator voltage cannot be obtained with adjustment of R25, reject the new lamp and try another.

#### HUM BAL. Adjustment, R44 --

The HUM BAL. control is located on the back of the instrument and may be adjusted as follows:

1. If a distortion analyzer is available, the HUM BAL. control should be adjusted for minimum distortion in the output waveform with the instrument operating from 5 to 20 cycles above or below the power line frequency (60 in most cases).
2. If a distortion analyzer is not available, the HUM BAL. control may be adjusted for minimum variation in the instrument output amplitude when the instrument is operating near the power line frequency. This amplitude variation may be observed on an oscilloscope or a sensitive AC voltmeter.

## Voltage Regulator Adjustment --

The voltage regulator output voltage must be 240 volts. This voltage may be measured between pin 8 of V5 and the chassis (See Fig. 5 for location of V5). If this voltage is not 240 volts, adjust R41 to obtain this value (R41 is located on RB1). If adjustment of R41 will not return the voltage to its proper value, it is an indication of trouble in the regulator circuit or an excessive load due to a defect in another section of the instrument. Line voltage variations from 105 to 125 (210 to 250) volts should not affect the output voltage of the regulator.

## Power Transformer Primary Connections --

The power transformer of this instrument is connected for 115 volt operation at the factory. If 230 volt operation is desired, it will be necessary to re-connect the power transformer primaries as indicated in the transformer detail on the schematic diagram. The power line fuse should also be replaced with the value indicated for F1 (for 230 volt operation) in the "Table of Replaceable Parts" in this instruction manual.

## Lubrication of Tuning Capacitor Drive Assembly --

The tuning capacitor drive assembly should be oiled once a month if the instrument is in constant use, or every six months if the instrument has only occasional use. Before lubricating the instrument, all dust and dirt that has collected on the tuning mechanism should be removed. The following need lubrication:

1. Vernier drive shaft bearing, one drop on each end.
2. Idler pulley (below the pilot lamp socket), one drop.
3. Spring loaded take-up pulley (on the back of the main tuning control shaft), one drop each end.

The most satisfactory oil for this purpose is Lubriplate #3, manufactured by the Fiske Brothers Refining Co., Newark, New Jersey

## Calibration and Frequency Response Adjustment --

### CAUTION

Do not attempt to calibrate this instrument unless you have the use of a secondary frequency standard such as the Hewlett-Packard Model 100C or 100D Secondary Frequency Standard or the Hewlett-Packard Model 524 or 522 Frequency Counter.

If a secondary frequency standard is used for calibration, it will be necessary to compare the instrument output with that of the frequency standard on an

oscilloscope. If a frequency counter is used for calibration, it will indicate the frequency directly. A voltmeter that is accurate over the range of 200 to 600 cycles/second (such as the Hewlett-Packard Model 400 A, B, or C or Model 410B) will also be necessary to adjust the frequency response of the instrument.

To compare the output frequency of the instrument with that of the secondary frequency standard an oscilloscope is used to obtain Lissajous figures. If the known frequency is connected to the horizontal input of the oscilloscope and the instrument output is connected to the vertical input of the oscilloscope, the frequency of operation of the instrument can be determined as follows:


1. Adjust the frequency of the instrument until a stable pattern is obtained on the oscilloscope.
2. Count the number of points that are tangent to a horizontal line on top of the pattern.
3. Count the number of points that are tangent to a vertical line along the right hand edge of the pattern.
4. The instrument operating frequency is then obtained from:

$$\frac{\text{Horizontal Tangencies}}{\text{Vertical Tangencies}} = \frac{\text{Unknown (instrument) Frequency}}{\text{Known (standard) Frequency}}$$

For example: If the pattern on the oscilloscope is a figure 8, and the secondary frequency standard is operating at 100 cycles/second, the instrument will be operating at exactly 50 cycles/second because:

$$\frac{1 (\text{Horizontal Tangency})}{2 (\text{Vertical Tangencies})} = \frac{50}{100}$$

Before attempting calibration, the instrument should be allowed to warm up for at least thirty minutes. All adjustments should be made with the cover and bottom plate fastened in place. All calibration controls may be reached through holes in the bottom plate as indicated below.

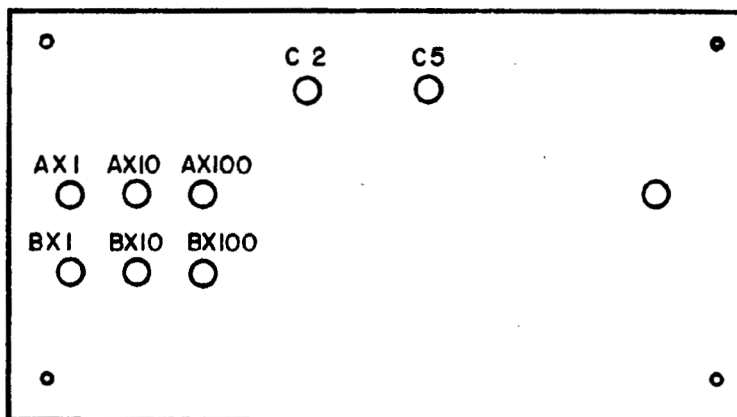

Bottom Plate Showing Location of Calibration Controls

The procedure for calibration and adjusting the frequency response of the Model 200I is as follows:

1. Terminate the instrument with a 1000 ohm resistive load. Set the **FREQ. RANGE** switch to the Bx10 position and the frequency dial to 20 (B scale). Set the **AMPLITUDE** control for 10 volts RMS output.
2. Adjust the Bx10 control (R16) so that the instrument is operating at exactly 200 cycles/second as indicated by comparison of the instrument output with that of the secondary frequency standard.
3. Change the frequency dial to 60 (B scale) and leave the **FREQ. RANGE** switch on Bx10. By means of C2 or C5 (It may be necessary to adjust both C2 and C5 if the instrument is badly out of calibration.) set the operating frequency of the instrument to exactly 600 cycles/second as indicated by comparison with the secondary frequency standard. Adjustment of C2 and C5 should be made with a non-metallic screwdriver.
4. Return the frequency dial to 20 (B scale) and adjust the **AMPLITUDE** control until the instrument output is exactly 10 volts RMS.
5. Move the frequency dial to 60 and note the variation in instrument output voltage. This variation should be corrected if the change in output voltage is greater than 1/4 volt.
6. Correct changes in output amplitude as follows: If the 600 cycle output was higher than the 200 cycle reference, decrease the capacity of C2 to correct for half the output amplitude variation and increase the capacity of C5 to return the frequency of oscillation to exactly 600 cycles/second. The adjustment of C5 will usually correct the remaining output amplitude variation but if this is not the case again adjust C2 for half the remaining output amplitude variation and bring the output frequency back with C5. If the output amplitude is low at the 600 cycle point it will be necessary to increase C2 to compensate for half the variation and decrease C5 to bring the frequency of oscillation back to 600 cycles/second.
7. Return the frequency dial to 20; if the output amplitude has shifted from 10 volts, repeat steps 4, 5, and 6.
8. Repeat steps 1 and 2 to make certain that the 200 cycle point is still in correct calibration after adjustment of C2 and C5.
9. If it was necessary to change the calibration of the 200 cycle point in step 8 it will also be necessary to repeat steps 4, 5, and 6.
10. Now calibrate the remaining ranges of the instrument by means of their calibration controls. (Location of these controls indicated on bottom plate drawing.) The following table lists the remaining ranges and a preliminary point

for calibration on each range. Rather than exact calibration at one frequency it is best to calibrate the instrument for minimum error over the whole frequency dial on each range. If one end of a range is 1% high the other end of the range should be 1% low, in this way the highest degree of accuracy will be obtained over the whole frequency range of the instrument.

<u>Range</u>	<u>Preliminary Calibration Point</u>
A x 1	15 cps
B x 1	50 cps
A x 10	150 cps
A x 100	1500 cps
B x 100	5000 cps

<http://www.ebaman.com>

2001 10/24/52 Serial 806 to

## Trouble Shooting --

The following information is designed to be of assistance in trouble shooting a defective instrument:

<u>Symptoms</u>	<u>Possible Cause</u>	<u>Test Procedure</u>	<u>Remedies</u>
Instrument NOT operating, pilot light NOT on.	Line fuse blown due to defective fuse, power line surge, or overload in power supply section of the instrument.	Replace fuse, if this fuse blows remove V8 (5Y3GT) and again replace the fuse. If this fuse blows it is an indication of, 1. Short circuit in wiring associated with power transformer. 2. Short circuit in filament wiring. 3. Tube with internal short circuit. 4. Defective power transformer.	1. Locate and clear short circuit. 2. Locate and clear short circuit. 3. Replace defective tube. 4. Replace power transformer.
Instrument NOT operating, pilot light ON.	Oscillator section not operating.	If the fuse does not blow when V8 is removed, it indicates: 1. Defective rectifier V8 (5Y3GT). 2. Short in direct current wiring.  Measure oscillator voltage between case of C9 and ground, it should be 26-28 volts RMS at 100%. If the oscillator voltage is present but of incorrect value refer to "Replacement of Lamp R19", if oscillator voltage not present check the following: 1. Oscillator tubes, V1 and V2. 2. The DC voltages in the oscillator section should agree with those indicated on the schematic diagram within $\pm 10\%$ . 3. A short circuit in tuning capacitor or associated trimmers.	1. Replace V8. 2. Locate and clear short circuit.  1. Replace V1 or V2 if defective. 2. Replace component causing incorrect DC voltage. 3. Clear short circuit if foreign material is causing short, remove carefully, if plates have been damaged and are touching straighten carefully.

## Trouble Shooting (Continued)

<u>Symptoms</u>	<u>Possible Cause</u>	<u>Test Procedure</u>	<u>Remedies</u>
		4. Range switch (S1) contacts may be dirty and not making good contact, or if trouble is on one band only it may be due to an open range resistor.	4. Clean range switch (S1) - contacts or replace range switch assembly if any of the resistors are defective.
	Amplifier section NOT operating properly, correct oscillator voltage.	Check DC voltages in amplifier section of instrument (V3 and V4), they should agree with voltages indicated on schematic diagram within $\pm 10\%$ .	Replace defective component.
Instrument operating, high amount of distortion present in output.	Incorrect DC voltages, defective regulator.	Check power supply output voltage and output of regulated power supply. (See "Voltage Regulator Adjustment" section.)	Correct difficulty in power supply or voltage regulator.
	Coupling capacitor defective (C7, C9, or C10).	Check DC voltage on grids of V2 and V4, should be less than 1/2 volt. DC voltage on grid of V3 should be not more than 2 volts with the AMPLITUDE control at 100.	Replace defective capacitor.
	Defective negative feedback capacitor C11.	Check DC voltage on pin 5 of V3, if it is over 6 volts remove the connection between C11 and V3. If this returns the voltage on pin 5 of V3 to normal it indicates that C11 is defective.	Replace C11.
	Wrong bias voltage in oscillator or amplifier sections.	Removal of the connection between C11 and V3 should increase the gain of the amplifier approximately 16 db. If it does not C11 is defective.	Replace C11.
		Check all cathode voltages in amplifier and oscillator. They should agree with the values indicated on the schematic diagram within $\pm 10\%$ .	Replace component or correct trouble that causes incorrect bias voltage to appear.

<u>Symptoms</u>	<u>Possible Cause</u>	<u>Test Procedure</u>	<u>Remedies</u>
Excessive DC present at OUTPUT terminals.	Faulty output coupling capacitor C12.	DC at OUTPUT terminals should be no greater than 2 volts, measured with a vacuum tube voltmeter with no load on the OUTPUT terminals.	Replace C12.
Rotation of AMPLITUDE control causes noise and instability of output waveform.	AMPLITUDE control (R28) dirty or worn.	Check resistance between arm of R28 and ground for smooth variation with rotation of AMPLITUDE control. (Disconnect instrument from power line when making resistance measurements.)	Replace R28.

<http://www.ebaman.com>

**TABLE OF REPLACEABLE PARTS**

Circuit Ref.	Description	-hp- Stock No.	Mfr. * & Mfrs. Designation
C1	Capacitor: fixed, silver mica, 620 $\mu\mu\text{f}$ , $\pm 5\%$ , 500 vdcw	15-12	A, Type 1479 Char. D
C2	Capacitor: variable, air, 7.5 to 102 $\mu\mu\text{f}$	12-11	AA, #A-103L #2 Term. Pos.
C3	Capacitor: Tuning Capacitor and Drive Assembly		
C4	Capacitor: fixed, silver mica, 620 $\mu\mu\text{f}$ , $\pm 5\%$ , 500 vdcw Electrical value adjusted at factory	15-12	A, Type 1479 Char. D
C5	Capacitor: variable, air, 7.5 to 102 $\mu\mu\text{f}$	12-12	AA, #0-103L. #2 Term. Pos.
C6 abc	Capacitor: fixed, electrolytic, 10, 10, 10 $\mu\text{f}$ , 450 vdcw	18-31	X #FPT 389
C7	Capacitor: fixed, paper, .5 $\mu\text{f}$ , $\pm 10\%$ , 400 vdcw	16-58	Z #300405
C8	Capacitor: fixed, mica 1800 $\mu\mu\text{f}$ , $\pm 10\%$ , 500 vdcw	14-47	Z C-1218
C9	Capacitor: fixed, electrolytic, 40 $\mu\text{f}$ , 450 vdcw	18-40	X FPS 146
C10	Capacitor: fixed, oil filled paper, .1 $\mu\text{f}$ , $\pm 10\%$ , 600 vdcw	16-1	CC 73P10496
C11	Capacitor: fixed, electrolytic, 20 $\mu\text{f}$ , 450 vdcw	18-20	X FPS 144
C12	Capacitor: fixed, electrolytic, 40 $\mu\text{f}$ , 450 vdcw	18-40	X FPS 146
C13	Capacitor: fixed, electrolytic, 40 $\mu\text{f}$ , 450 vdcw	18-40	X FPS 146
C14	Capacitor: fixed, oil filled paper, 4 $\mu\text{f}$ , $\pm 10\%$ , 600 vdcw	17-10	P T64
C15	Capacitor: fixed, electrolytic, 40 $\mu\text{f}$ , 450 vdcw	18-40	X FPS 146
C16	Capacitor: fixed, oil filled paper, .05 $\mu\text{f}$ , $\pm 10\%$ , 600 vdcw	16-15	CC 73P47396

\*See "List of Manufacturers Code Letters For Replaceable Parts Table."

**TABLE OF REPLACEABLE PARTS**

Circuit Ref.	Description	-hp- Stock No.	Mfr. * & Mfrs. Designation
C17	Capacitor: fixed, ceramic 39 $\mu\mu\text{f}$ , $\pm 5\%$ , NPO temp. coeff. 500 vdcw Part of Range Switch Assembly	15-4	A, Hi-Q div. Type CI-2
C18	Capacitor: fixed, ceramic, 39 $\mu\mu\text{f}$ , $\pm 5\%$ , NPO temp. coeff. 500 vdcw Electrical value adjusted at factory	15-4	A, Hi-Q div. Type CI-2
R1 - R12	Part of Range Switch Assembly		
R13	Resistor: variable, composition, 500,000 ohms, linear taper	210-20	G 33-010-255
R14	Resistor: variable, composition, 200,000 ohms, linear taper	210-19	I Type 37
R15	Resistor: variable, composition, 50,000 ohms, linear taper	210-18	G 33-101-176
R16	Resistor: variable, composition, 20,000 ohms, linear taper	210-16	G 33-101-725
R17	Resistor: variable, composition, 5000 ohms, linear taper	210-15	G 33-010-256
R18	Resistor: variable, composition, 2000 ohms, linear taper	210-14	G
R19	Lamp: 10 W 250 V S6 Clear	211-29	O, 10S6/10 250 V.
R20	Resistor: fixed, composition, 56,000 ohms, $\pm 10\%$ , 1 W	24-56K	B GB 5631
R21	Resistor: fixed, composition, 100,000 ohms, $\pm 10\%$ , 2 W	25-100K	B HB 1041
R22	Resistor: fixed, composition, 56,000 ohms, $\pm 10\%$ , 1 W	24-56K	B GB 5631
R23	Resistor: fixed, composition, 560,000 ohms, $\pm 10\%$ , 1 W	24-560K	B GB 5641
R24	Resistor: fixed, wirewound, 3000 ohms, $\pm 10\%$ , 1 W	26-3000	R Type BW
R25	Resistor: variable, wirewound, 1000 ohms, linear taper	210-5	G

\*See "List of Manufacturers Code Letters For Replaceable Parts Table."

**TABLE OF REPLACEABLE PARTS**

Circuit Ref.	Description	-hp- Stock No.	Mfr. * & Mfrs. Designation
R26	Resistor: fixed, composition, 560 ohms, ±10%, 1 W	24-560	B GB 5611
R27	Resistor: fixed, wirewound, 5000 ohms, ±10%, 10 W	26-8	S Type 1-3/4E
R28	Resistor: variable, composition, 25,000 ohms, linear taper	210-54	B
R29	Resistor: fixed, composition, 2,000 ohms, ±10%, 1 W	24-22K	B GB 2231
R30	Resistor: fixed, composition, 3300 ohms, ±10%, 1 W	24-3300	B GB 3321
R31	Resistor: fixed, composition, 56,000 ohms, ±10%, 1 W	24-56K	B GB 5631
R32	Resistor: fixed, composition, 56,000 ohms, ±10%, 1 W	24-56K	B GB 5631
R33	Resistor: fixed, composition, 56,000 ohms, ±10%, 1 W	24-56K	B GB 5631
R34	Resistor: fixed, composition, 56,000 ohms, ±10%, 1 W	24-56K	B GB 5631
R35	Resistor: fixed, composition, 560,000 ohms, ±10%, 1 W	24-560K	B GB 5641
R36	Resistor: fixed, composition, 560 ohms, ±10%, 1 W	24-560	B GB 5611
R37	Resistor: fixed, wirewound, 5000 ohms, ±10%, 10 W	26-8	S Type 1-3/4E
R38	Resistor: fixed, composition, 10,000 ohms, ±10%, 1 W	24-10K	B GB 1031
R39	Resistor: fixed, composition, 560,000 ohms, ±10%, 1 W	24-560K	B GB 5641
R40	Resistor: fixed, composition, 33,000 ohms, ±10%, 1 W	24-33K	B GB 3331
R41	Resistor: variable, composition, 25,000 ohms, linear taper	210-11	G BAI-010-1190

\*See "List of Manufacturers Code Letters For Replaceable Parts Table."

TABLE OF REPLACEABLE PARTS

Circuit Ref.	Description	-hp- Stock No.	Mfr. * & Mfrs. Designation
R42	Resistor: fixed, composition, 47,000 ohms, $\pm 10\%$ , 1 W	24-47K	B GB 4731
R43	Resistor: fixed, composition, 10,000 ohms, $\pm 10\%$ , 2 W	25-10K	E HB 1031
R44	Resistor: variable, wirewound, 50 ohms, linear taper	210-2	G 21-010-067
R45	Resistor: fixed, composition, 100,000 ohms, $\pm 10\%$ , 1 W	24-100K	B GB 1041
R46	Resistor: fixed, composition, 100,000 ohms, $\pm 10\%$ , 1 W	24-100K	B GB 1041
R47	Resistor: fixed, composition, 270,000 ohms, $\pm 10\%$ , 1 W	24-270K	B GB 2741
	Binding Post:	Model 10A	HP
F1	Fuse: 1 Ampere (for 115 volt operation) Withstands 200% overload for 25 seconds.	211-18	E, Type MDL-1
F1	Fuse: 1/2 Ampere (for 230 volt operation) Withstands 200% overload for 25 seconds.	211-20	E, Type MDL-1/2
	Fuseholder:	140-18	T, #342001
	Knob: 1-5/8" diam.	37-12	HP
	Knob: 1-1/2" diam.	37-11	HP
	Knob: 2" diam.	37-13	HP
I1	Lamp: Pilot	211-47	O, Mazda #47
	Lampholder: for 10 W lamp.	145-15	Leecraft Mfg. Co. #659-1
P1	Power Cable:	812-56	HP
L1	Reactor: 6H @ 125 MA, 240 ohms	911-12	HP
S1, R1-R12	Range Switch Assembly	I-19W	HP
S2	Switch: Rotary	310-1	D, 81715

\*See "List of Manufacturers Code Letters For Replaceable Parts Table."

**TABLE OF REPLACEABLE PARTS**

Circuit Ref.	Description	-hp- Stock No.	Mfr. * & Mfrs. Designation
	Panel Plate	I-43	HP
T1	Transformer: Power	910-55	HP
	Escutcheon	G-99A	HP
	Tuning Capacitor and Drive Assembly	I-100	HP
V1	Tube: 6SJ7	212-6SJ7	ZZ
V2	Tube: 6V6 or 6F6	212-6V6 212-6F6	ZZ ZZ
V3	Tube: 6SJ7	212-6SJ7	ZZ
V4	Tube: 6V6	212-6V6	ZZ
V5	Tube: 6L6	212-6L6	ZZ
V6	Tube: 6SQ7	212-6SQ7	ZZ
V7	Tube: OD3	212-OD3	ZZ
V8	Tube: 5Y3GT	212-5Y3GT	ZZ

\*See "List of Manufacturers Code Letters For Replaceable Parts Table."

**LIST OF MANUFACTURERS CODE LETTERS  
FOR REPLACEABLE PARTS TABLE**

<u>Code Letter</u>	<u>Manufacturer</u>
A	Aerovox Corp.
B	Allen-Bradley Co.
C	Amperite Co.
D	Arrow, Hart and Hegeman
E	Bussman Manufacturing Co.
F	Carborundum Co.
G	Centralab
H	Cinch Manufacturing Co.
HP	Hewlett-Packard
I	Clarostat Manufacturing Co.
J	Cornell Dubilier Electric Co.
K	Hi-Q Division of Aerovox Corp.
L	Erie Resistor Corp.
M	Federal Telephone and Radio Corp.
N	General Electric Co.
O	General Electric Supply Corp.
P	Girard-Hopkins
R	International Resistance Co.
S	Lectrohm, Inc.
T	Littelfuse, Inc.
V	Micamold Radio Corp.
X	P.R. Mallory Co., Inc.
Z	Sangamo Electric Co.
AA	Sarkes Tarzian
CC	Sprague Electric Co.
DD	Stackpole Carbon Co.
EE	Sylvania Electric Products, Inc.
FF	Western Electric Co.
HH	Amphenol
II	Dial Light Co. of America
KK	Switchcraft, Inc.
LL	Gremer Mfg. Co.
MM	Carad Corp.
ZZ	Any tube having RETMA standard characteristics

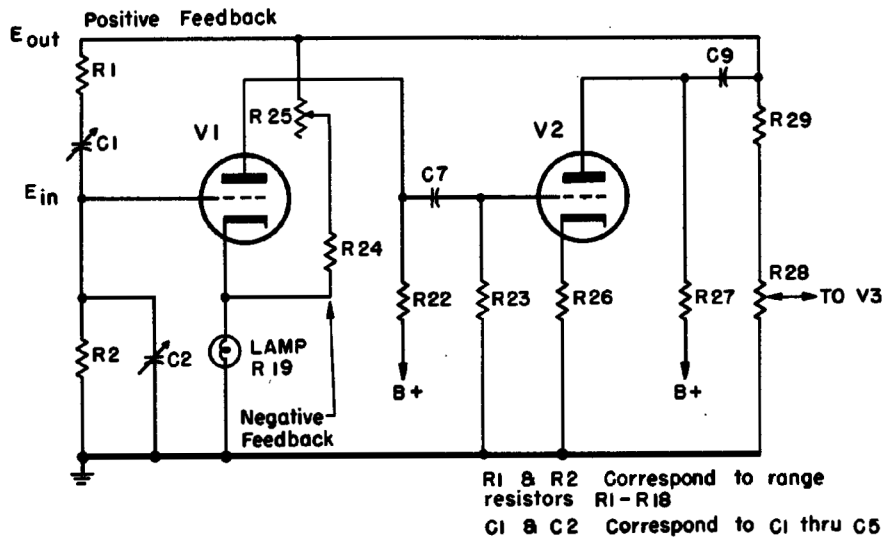


Fig. 1. Simplified Oscillator Circuit

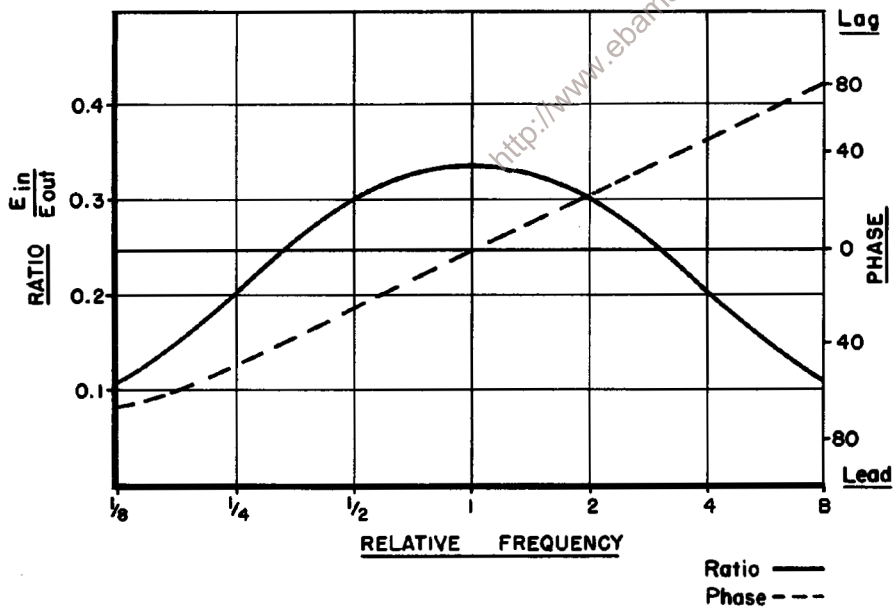


Fig. 2. Positive Feedback Network Characteristics

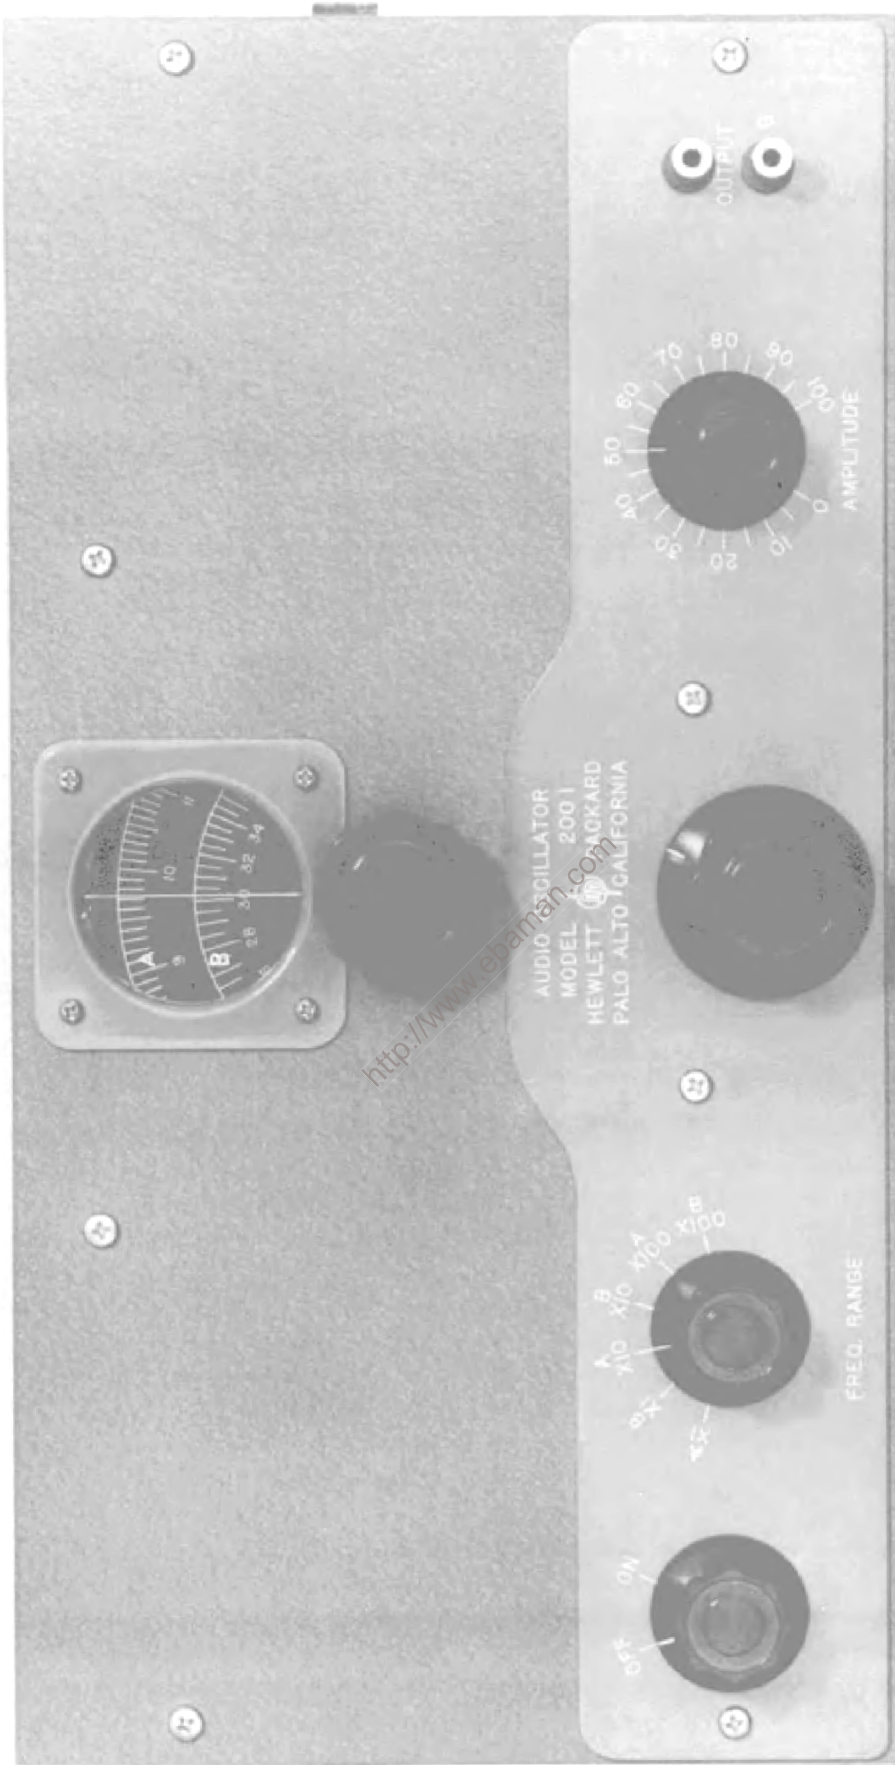


Fig. 3. Model 2001 Audio Oscillator

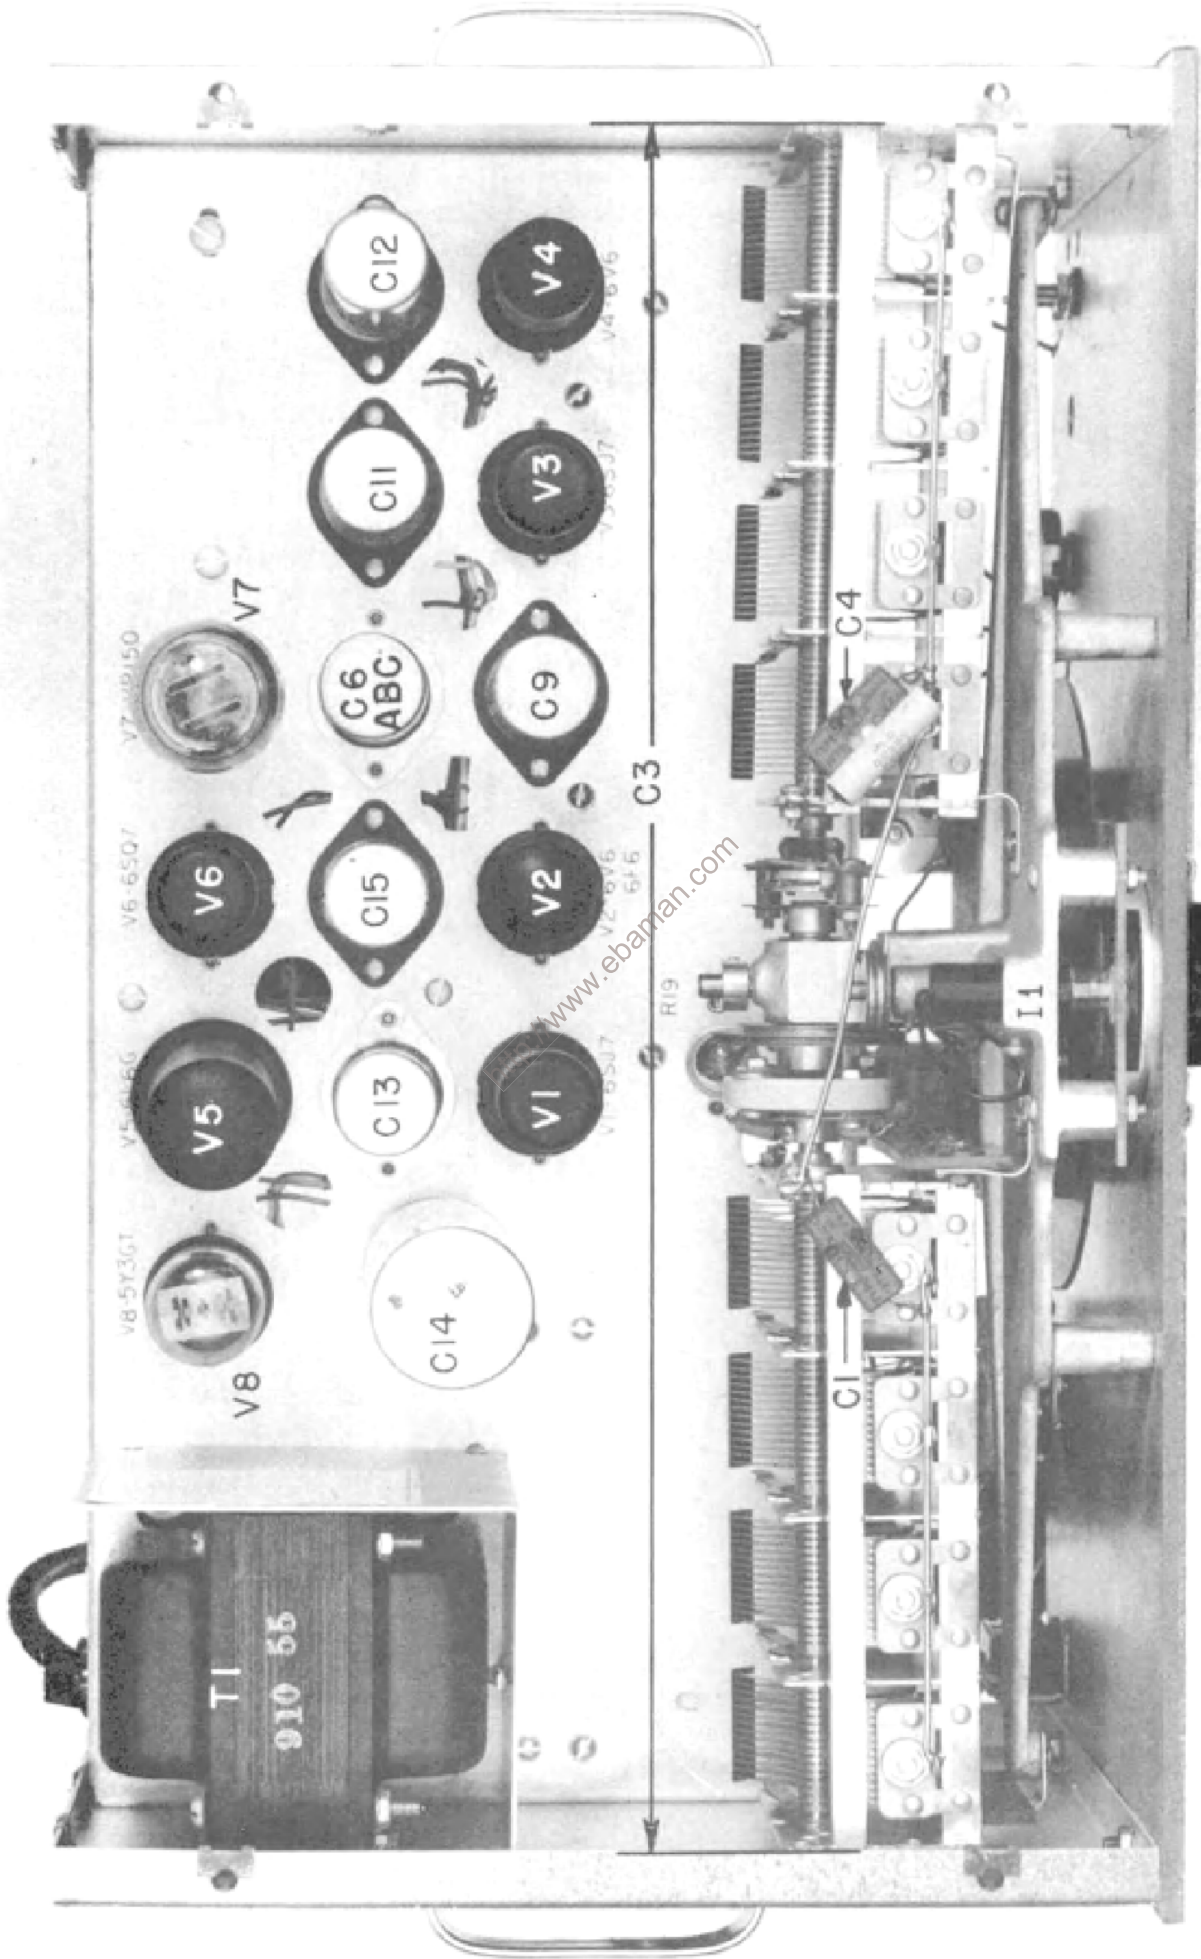


Fig. 4. Model 200I Top View Cover Removed


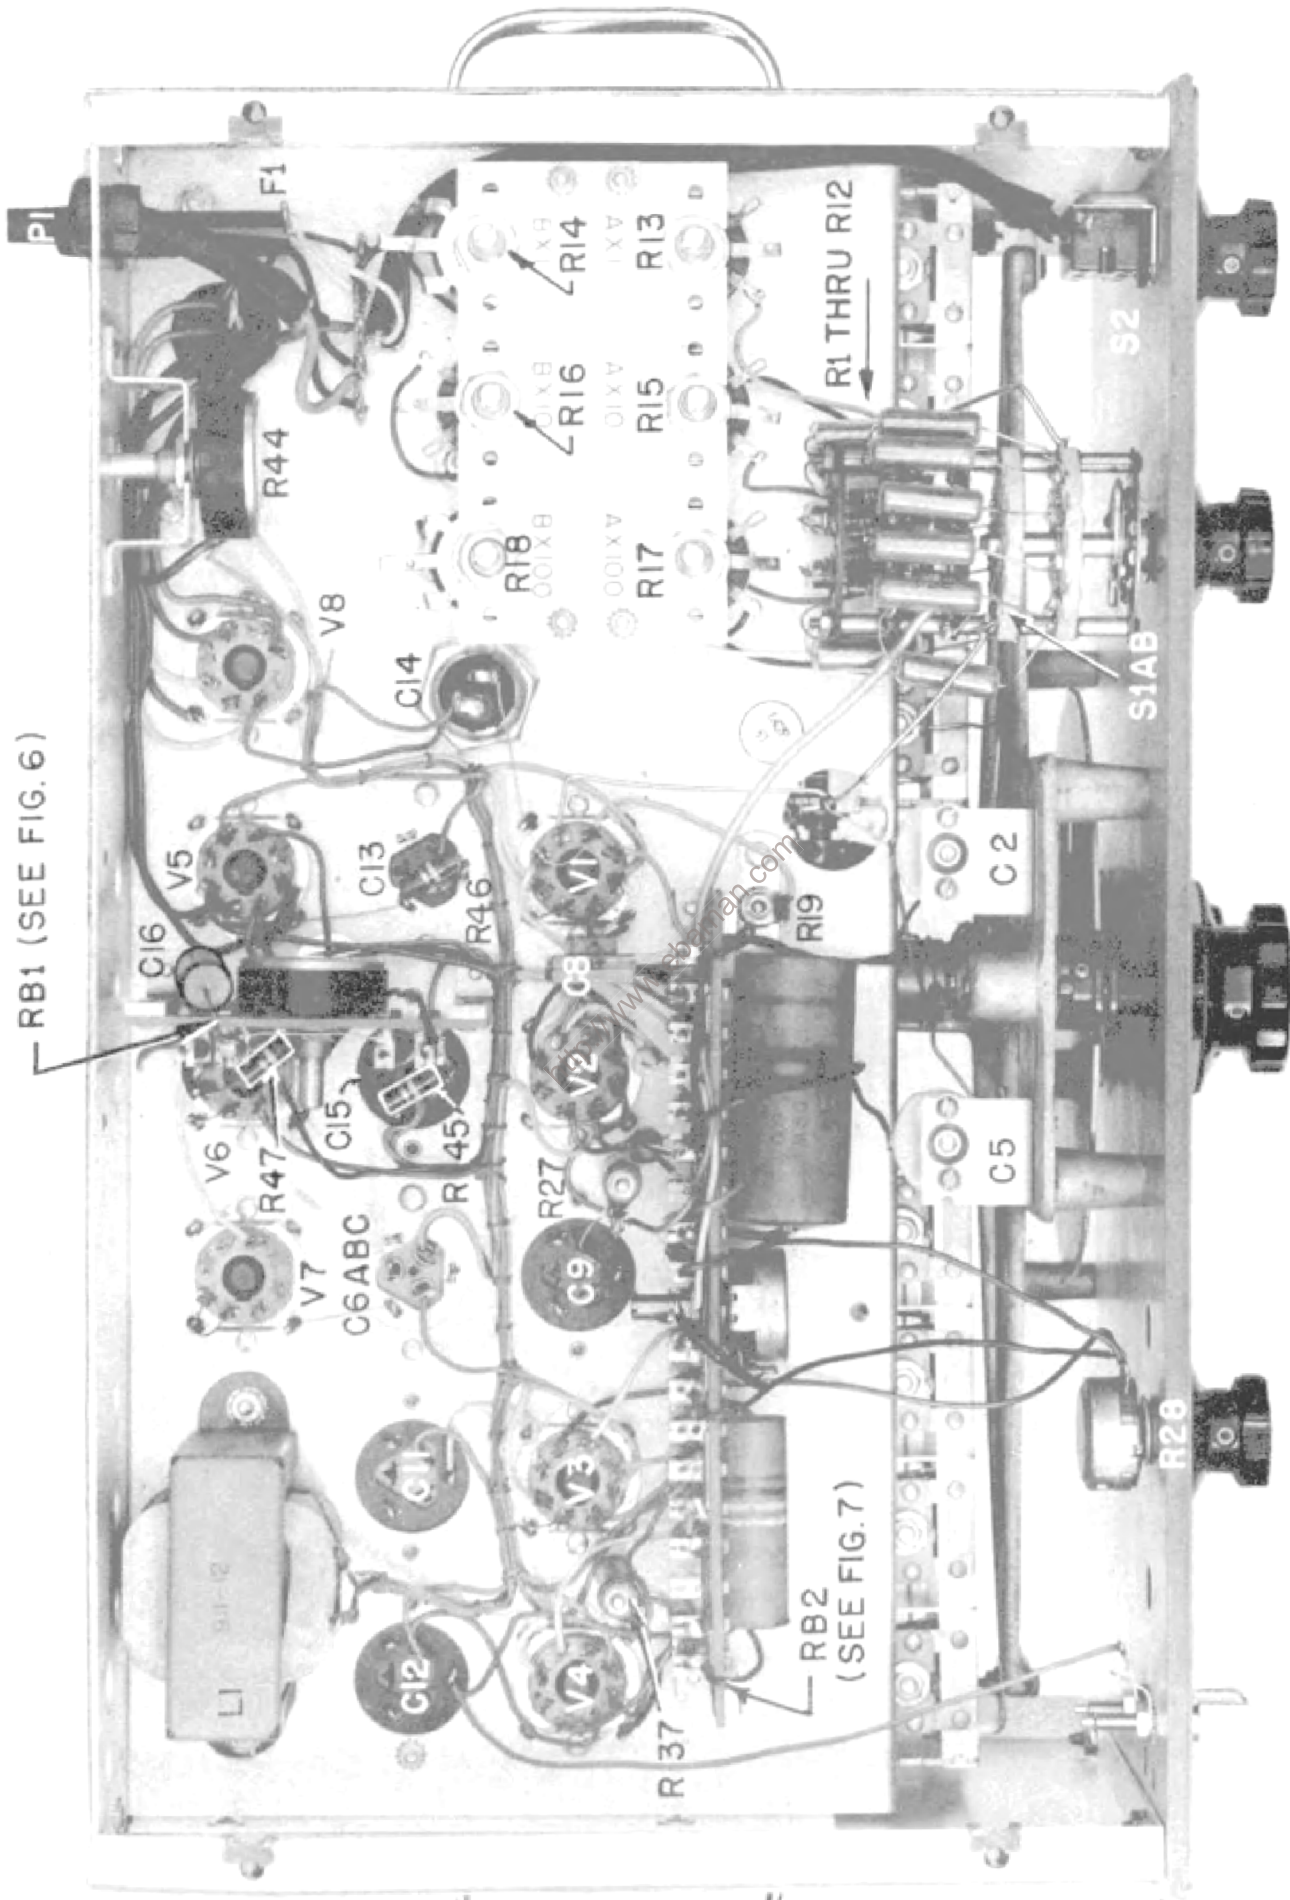


Fig. 5. Model 200I Bottom View Bottom Plate Removed

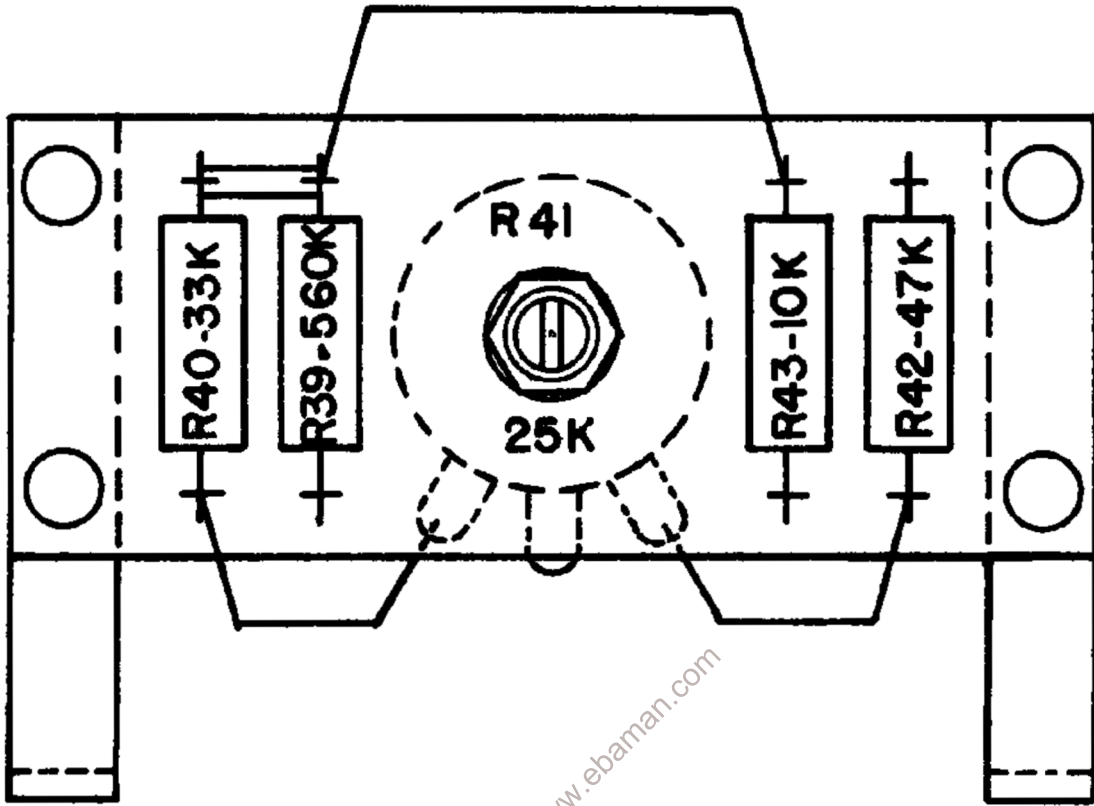

RB 1

Fig. 6. Model 2001 Resistor Board Detail

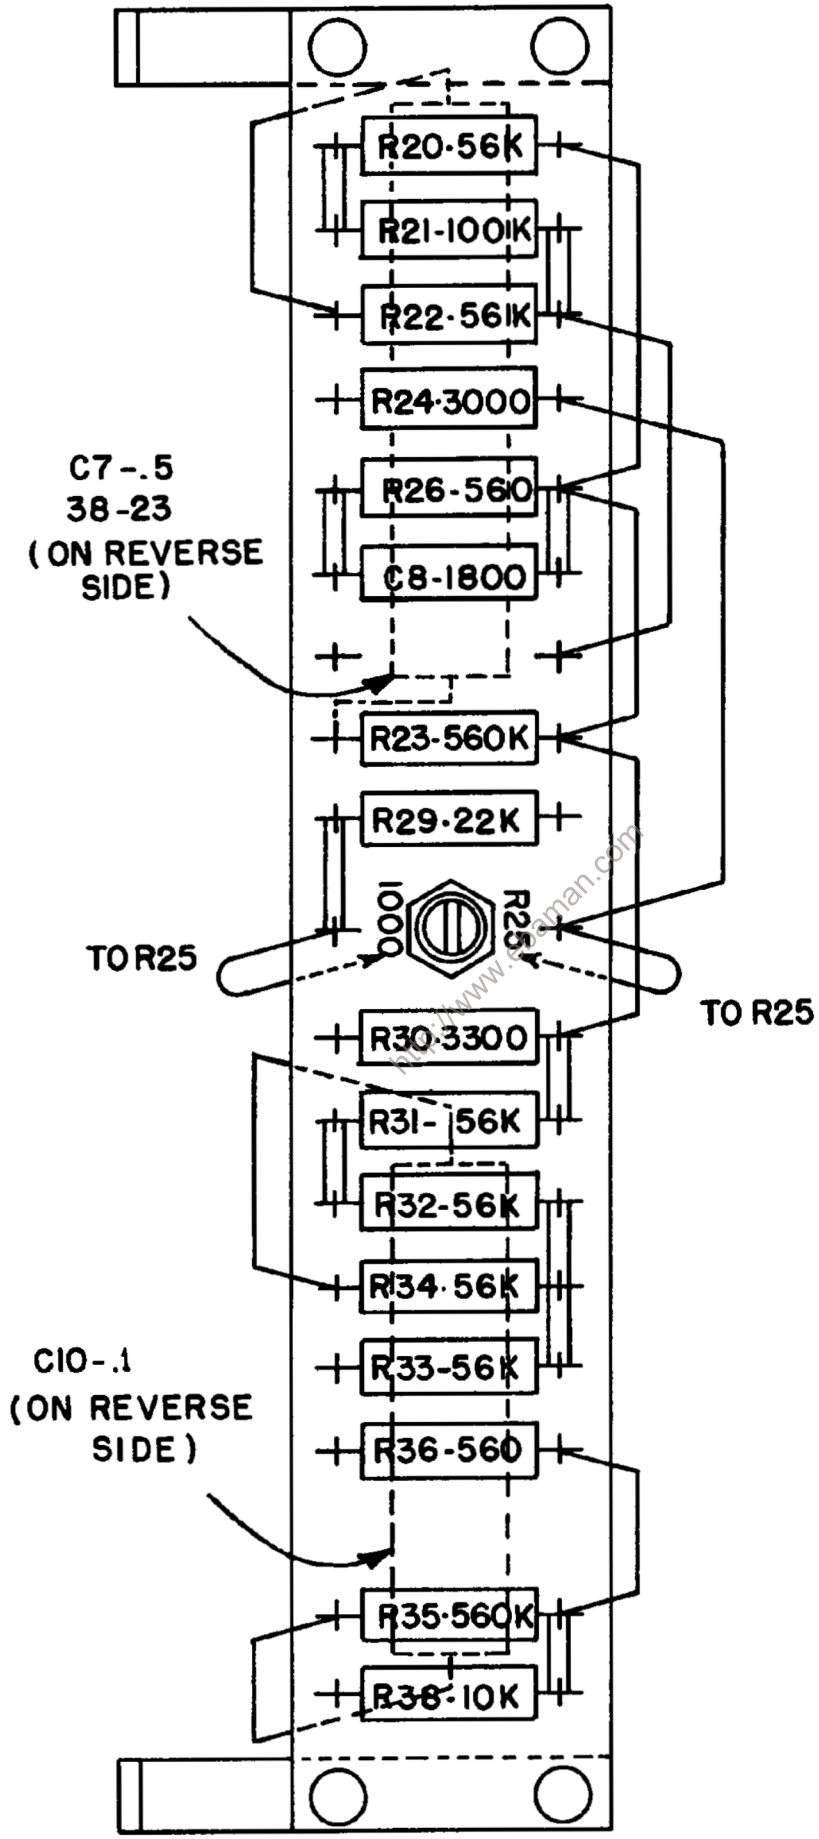


Fig. 7. Model 200I Resistor Board Detail

# MANUAL CHANGES

MODEL 200I


OSCILLATOR

To adapt this manual to instruments with earlier serial numbers make the changes shown in tables.

Instrument Serial Prefix	Make Manual Changes	Instrument Serial Prefix	Make Manual Changes
976 to 645	1		
645 and below	1 and 2		
*Type 92544 & earlier	1, 2 and 3		

- CHANGE 1      C17: Delete  
                   R7: Change to 9.8M.
- 
- CHANGE 2      R19: Change to 6-watt, 115-volt lamp; Ⓟ Stock No. 211-5.  
                   R24: Change to 1500 ohms; Ⓟ Stock No. 26-1500.
- 
- CHANGE 3      C13: Connect directly to B+.  
                   C15: Delete  
                   R41, 45, 46 and 47: Delete  
                   V2, pin 4: Connect to a voltage divider; 10K to B+, 27K to ground.  
                   V6, pin 2: Connect directly to junction of R40 and R42.

\*Early manuals were identified by type numbers which indicated the month, day, and year, respectively.

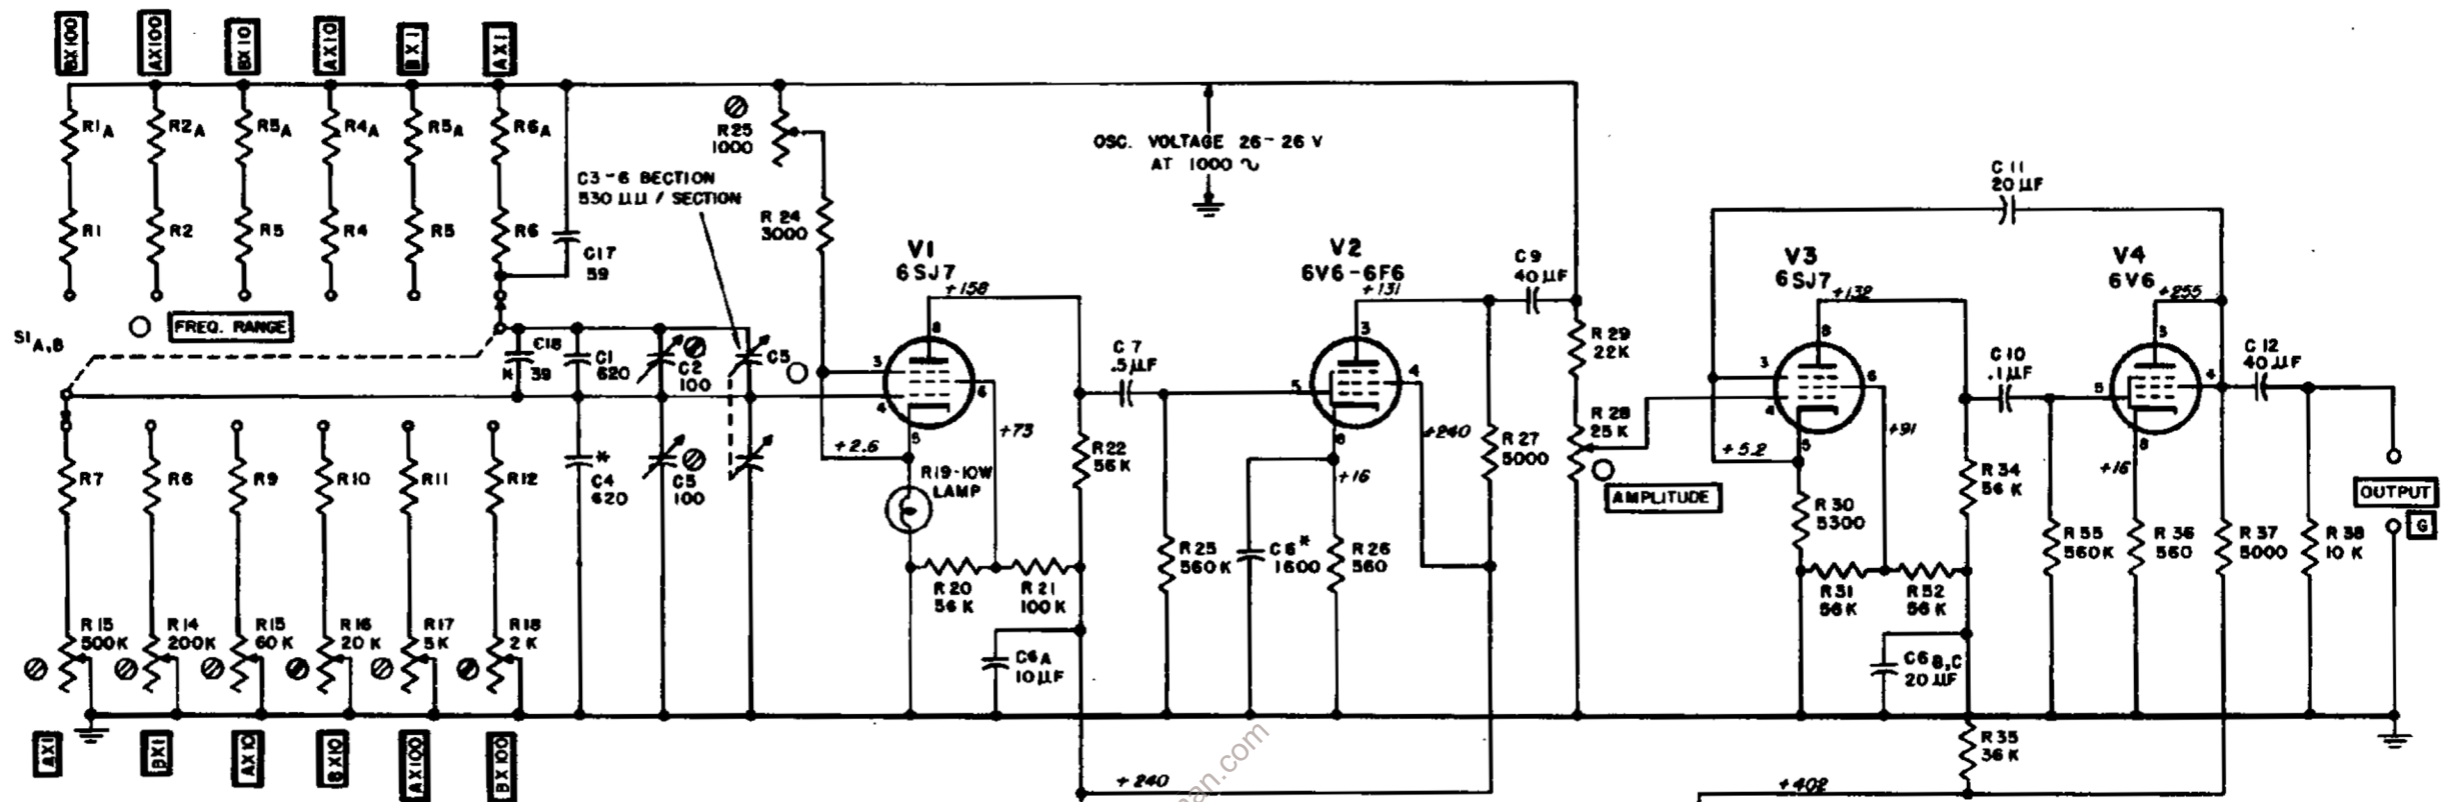

$R1 + R1A = 32.07 K$	$R7 = 10.31 M$
$R2 + R2A = 93.80 K$	$R8 = 3.05 M$
$R3 + R3A = 321.70 K$	$R9 = 958 K$
$R4 + R4A = 1.003 M$	$R10 = 305 K$
$R5 + R5A = 3.235 M$	$R11 = 95.5 K$
$R6 + R6A = 9.985 M$	$R12 = 30.5 K$

**NOTES**

**CONDITIONS OF DC VOLTAGE MEASUREMENT:**

1. LINE VOLTAGE AT 115/230 VOLTS, 50/60  $\sim$
2. AMPLITUDE AT ZERO
3. SET FREQUENCY DIAL AT 10, RANGE AT AX100
4. VOLTAGES MEASURED BETWEEN INDICATED POINTS AND CHASSIS WITH VOLTMETER OF 122 MEGOHMS INPUT RESISTANCE.

ALL CAPACITANCE IN  $\mu$ MUF UNLESS OTHERWISE NOTED.

K = 1000 OHMS.

M = 1 MEGOHM


\* = ADJUSTED AT FACTORY. AVERAGE VALUE SHOWN. PART MAY BE OMITTED.

⊖ = CHASSIS



○ = PANEL CONTROL

⊙ = SCREWDRIVER ADJUSTMENT

<http://www.ebaman.com>

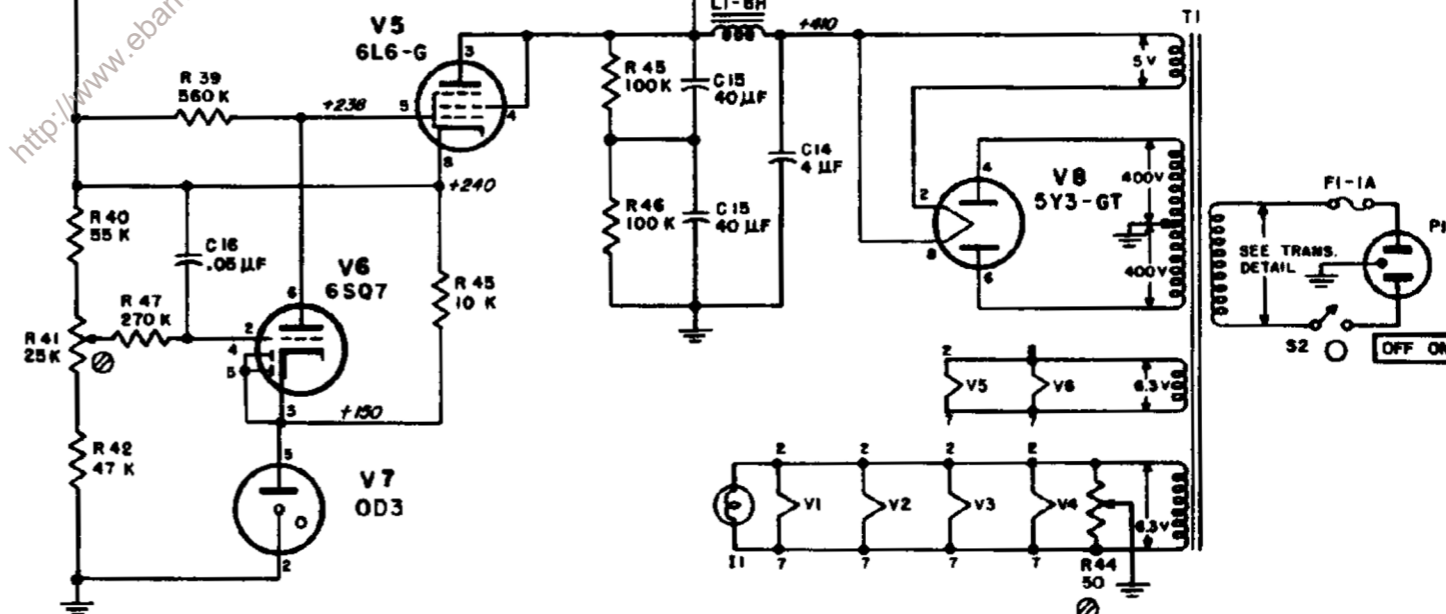

**TRANSFORMER DETAIL**

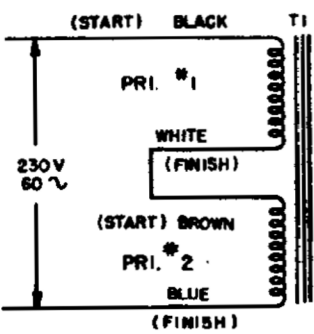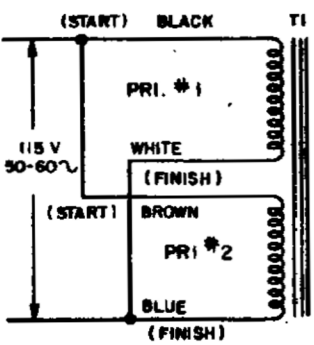

**SCHEMATIC DIAGRAM OF MODEL 2001 SERIAL 1145 & ABOVE**